

*Sunbeam*

# Toastamatic

2 Slice Automatic Toaster

INSTRUCTION BOOKLET.



---

TA4100

# Sunbeam's Safety Precautions.

## SAFETY PRECAUTIONS FOR YOUR TOASTAMATIC

- Do not place any objects such as toast on top of your toaster when in use. Never cover your toaster with items such as cosies as they may catch fire.
- Operate the toaster on a flat level surface.
- Use your toaster well away from walls and curtains.
- Do not leave your toaster unattended when in use.
- Do not allow crumbs to accumulate in the crumb tray.
- Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.
- **WARNING:** Never attempt to extract jammed toast, crumpets or muffins with a knife or any other object, as contact with the live element may cause electrocution.

## SAFETY PRECAUTIONS FOR ALL ELECTRICAL APPLIANCES

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- **Read carefully and save all the instructions provided with an appliance.**
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please ring our Toll Free number (Australia only) 1800 025 059. New Zealand - contact the Sunbeam Office in Auckland on 09 912 0747.

## Ensure the above safety precautions are understood.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند


ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığının emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Features of your Sunbeam Toastamatic.

---

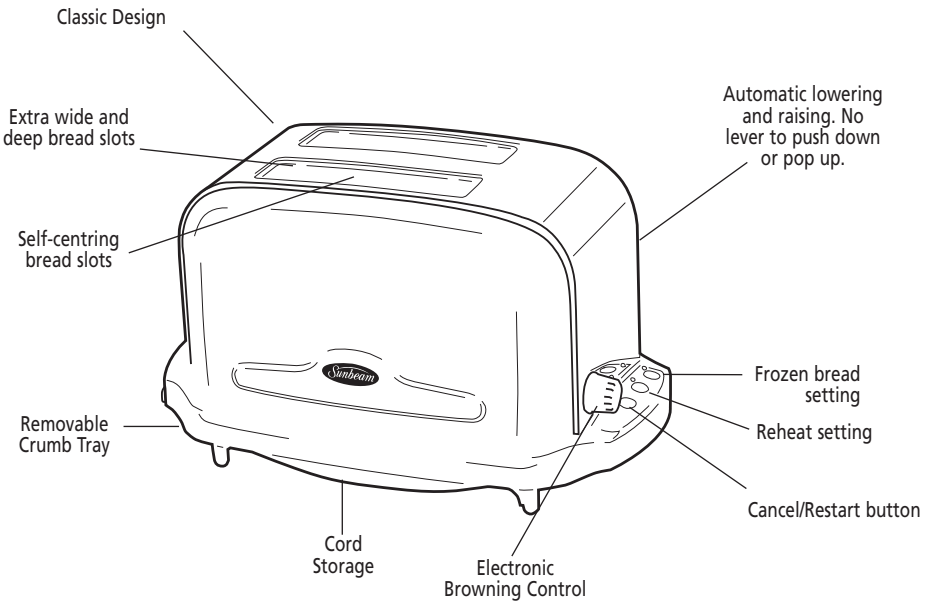

## **A Fully Automatic Toaster.**

Automatically lowers your bread, cooks it to perfection, then raises it when ready - without lifting a finger.

## **Classic design with superb chrome surface.**

A stylish, easy to clean design to complement any kitchen.

## **Extra wide and deep bread slots.**

Ideal for a variety of breads, both thick and thin, plus bagels, crumpets and muffins.

## **Self-centring bread slots.**

Whether you are toasting thick or thin bread, your bread will always be held in the centre of the slot to ensure even toasting.

## **Removable crumb tray.**

Pulls out from underneath for easy removal of crumbs.

## **Electronic browning control.**

Variable toast settings from 1-6 toast bread to the desired colour.

## **Frozen bread setting.**

Defrosts and toasts frozen bread.

## **Reheat setting.**

Reheats toast without additional browning.

## **Cancel/Restart button.**

Press cancel to interrupt the toasting cycle. For restart press again to start toasting.

## **Cord Storage.**

The cord can be wrapped underneath for safe convenient storage.

# The Sunbeam Toastamatic

---

Congratulations on the purchase of your Sunbeam Toastamatic toaster. This new toaster has evolved from the world famous Toastermatic® fully automatic toaster that was manufactured in Australia by Sunbeam for more than a quarter of a century from 1960 until the mid-1980's.

The introduction of the Toastermatic® back in 1960 revolutionised the toaster market by offering the only toaster that was truly fully automatic. Fully automatic in lowering of the bread, cooking to perfection and raising of toast when it was ready. All that was required was for you to pop a piece of bread in the toaster and this would trigger the toasting cycle to commence. There were no levers to push down or pop up.

The quality of these toasters is legendary and we are proud to report that many of those toasters produced by Sunbeam back in the 60's and 70's are still in operation today.

We are pleased today to be able to re-launch the famous Toastamatic which includes all the fully automated functions of lowering, cooking and raising, plus the essential modern features of Cancel, Defrost & Reheat settings.

All you have to do is choose your favourite bread, select your desired colour setting then place it in the toaster. The bread will lower automatically, cook to your setting, then raise automatically when ready.

## Using your Sunbeam Toastamatic

---

Plug the power cord into a 230/240 volt AC power outlet and turn the power on.

### Toasting bread.

1. Select desired colour setting on the Electronic Browning Control from 1-6.
2. Place bread into the slot marked "▼ ONE SLICE ▼", this will trigger the Switch Lever to lower the bread carriage and begin the toasting cycle.

**Note:** This toaster features an automatic motor that automatically lowers and raises your toast. You simply place your bread into the slot. The bread triggers the metal Switch Lever which begins the toasting cycle by lowering the bread and transmitting power to the heating elements.

The Switch Lever is located in the bread slot that is marked "▼ ONE SLICE ▼" illustrated in Figure 1. When toasting a single slice of bread you must place your bread in the slot marked "▼ ONE SLICE ▼" in order for the toaster to begin its toasting cycle.

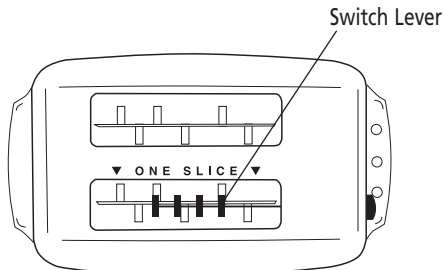


Figure 1

- When the desired colour is achieved, the toaster will automatically switch off and gently raise the toast. If you need to remove the toast before the cycle is complete, press the Cancel Button.

### **Toasting frozen bread**

To toast frozen bread, simply drop your bread into the slot and immediately press the Frozen button. This setting extends the toasting time to allow for the defrosting of the bread before toasting.

### **Reheating toast**

To reheat your toast, simply drop it into the bread slot and immediately press the Reheat button. The toaster will gently reheat the toast without burning it or drying it out.

### **Toasting muffins and crumpets.**

Ensure muffins or crumpets are cut into even halves and fit freely into the bread slot. Do not force them into the toaster.

If jamming does occur, turn the power off, remove the plug and ease bread out of the toaster.

**WARNING: Never attempt to extract jammed toast, muffins, bagels or crumpets with a knife or any other object, as contact with the live elements may cause electrocution.**

**The top of this toaster does get hot. Care should be taken when removing small pieces of toast or crumpets/muffins to prevent burning your fingers.**

## **Care and Cleaning.**

---

Always turn the power OFF and remove plug after use and before cleaning your toaster.

### **To clean the exterior.**

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.

**Do not use metal scourers or abrasives as this may scratch the exterior surface.**

### **Removable Crumb Tray.**

To remove the crumbs, simply slide out the tray, empty and replace it in the toaster.

**Clean the crumb tray regularly. Do not allow crumbs to accumulate.**

### **To clean the toaster interior.**

Clean inside the toaster regularly. To do this, unplug, turn upside down over the sink and shake all the crumbs out.

*Sunbeam is a Registered trademark. Toastamatic trademark pending. Made in China. Due to minor changes in design or otherwise, the product you buy may differ from the one shown in this booklet. Approved by the appropriate Electrical Supply Authorities. Backed by Sunbeam's 12 Month Replacement Guarantee and National Service Network.*

© Copyright. SUNBEAM CORPORATION LIMITED 2001. (INCORPORATED IN N.S.W.) A.C.N. 000 006 771

*For more information or advice on any Sunbeam products, contact the Sunbeam Consumer Service Line on 1800 025 059 in Australia. In New Zealand - contact the Sunbeam Office in Auckland on 09 912 0747.*